


Frisper[®] Freshkeeper[™] vacuum sealer

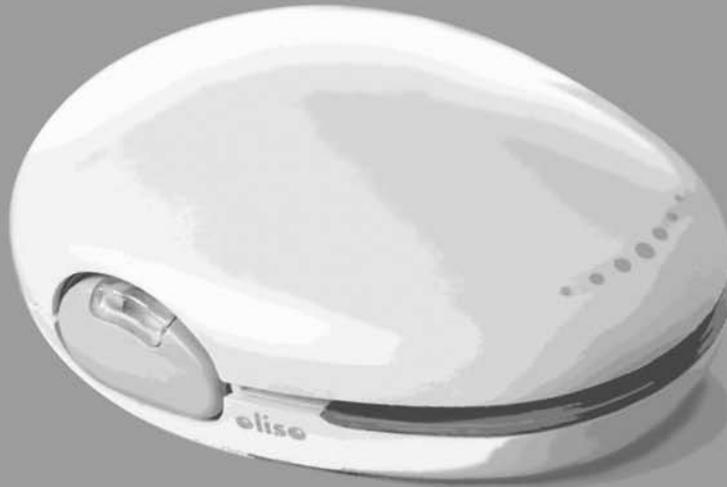

SAVE THESE INSTRUCTIONS

oliso[®]

Index

Important Safety Instructions	3
Getting to know your Frisper	4
Simple steps to start friscing vac-snap zipper bags	5
How to re-use a Frisper vac-snap zipper bag	6
Goof proof sealing — how to save an incomplete seal.....	7
Care and maintenance.....	8
Common questions and quick tips	9
Troubleshooting	10
Simple steps to using Frisper accessories	11
One Year Limited Warranty.....	Back Cover

Thanks

Thank you for purchasing the Frisper Vacuum Sealer from Oliso. You're just a few steps away from a whole new way of storing your food.

For more info, please visit
www.frisper.com

Please note: Not all Frisper models have all components explained in this manual. The FF500 does not have a flexi tube valve port or flexi tube. Visit our website, www.oliso.com, to learn more about Frisper models.

QUESTIONS?
Call 1.800.481.7978
for personal service.
We're open 7am - 7pm PST

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this product


When using Frisper, basic safety precautions should always be followed, including the following:

- 1) Use Frisper only for its intended use.
- 2) To protect yourself against a risk of electric shock, do not immerse Frisper in water or other liquids.
- 3) Never tug cord to disconnect from the outlet. Grasp plug and pull to disconnect.
Do not unplug Frisper when in use.
- 4) Clean Frisper's bag puncture tooth and drip tray after handling raw meats, seafood, and poultry to prevent bacterial contamination.
- 5) Frisper's bag puncture tooth is sharp. Please take caution when handling it.
- 6) Frisper's heat coil stays warm for a few seconds after use. Please take caution when handling it.
- 7) Protect your fingers while you are closing the Frisper lid.
- 8) Keep Frisper bags away from babies and children.
- 9) Do not allow children to use Frisper. Close supervision is necessary for any appliance being used near children.
- 10) Only use the AC adaptor that was supplied with Frisper.
- 11) Always unplug the Frisper when not in use.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

Getting to know your Frisper

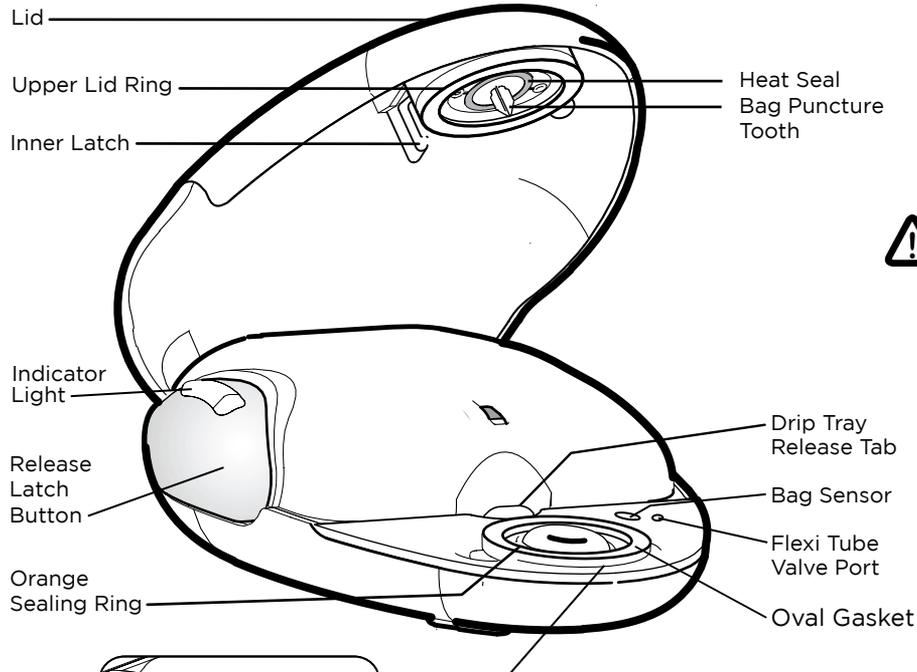

Bag Puncture Tooth

The bag puncture tooth is made of an antibacterial plastic to help prevent the growth of bacteria and germs. We recommend that it should be cleaned with hot water and antibacterial soap after contact with raw meats/seafood and poultry. This is a smart precaution to take to maintain a hygienic work area.



Note: The puncture tooth can be sharp. Always use care when handling or cleaning it.

Flexi Tube Valve Port

This device should only be used with accessories such as canisters, permanent valve pantry bags, bottle stoppers or mason canning jar sealers. If you inadvertently plug the flexi tube in and attempt to frisper a zipper bag, no air will evacuate from the bag. This can be frustrating, so double check at all times and if you're simply frispering a vac-snap zipper bag, **do not have the tube plugged in.**


Liquid Drip Tray

Your Frisper has an antibacterial liquid run off or drip tray which catches liquids which have been pulled and vacuumed out of the bag as you are frispering. This tray allows you to vacuum seal moist proteins such as beef, lamb and some fish. It is always recommended to rinse and blot dry all proteins before frispering. The tray, minus the gasket insert, is top rack dishwasher safe. Always empty and clean the tray between uses. Do not allow the drip tray to overflow.


Simple steps to start frisping vac-snap zipper bags

The bags enclosed with your Frisper are designed and engineered to very specific standards. Zipper bags from the grocery store aren't made strongly enough, and air passes through them.


- 1** Press out excess air before closing bag. Shift food away from the edge you wish to seal.

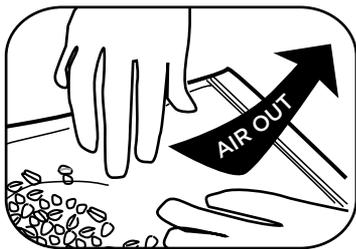


- 2** Zip shut using your zip-disc. You'll only be able to get a great frisp if all the air is out of the bag, so the zipper must be perfectly sealed.

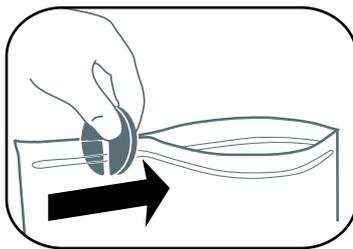


- 3** Lay bag flat, place the indicator circle directly over the orange sealing ring on the lower tray. The puncture tooth will pierce the bag in the circle's center.

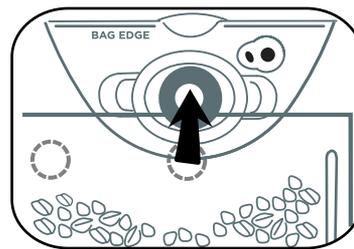


- 4** Press firmly on the lid of the Frisper. It will lock down and immediately begin vacuuming. Remove your hand from the lid to avoid air in the bag.

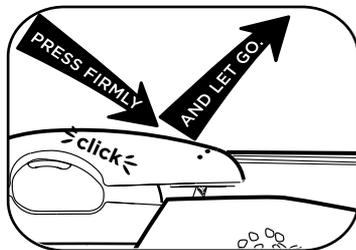

- 5** When the Frisper stops (usually less than 30 seconds) the indicator light will flash green. Push the release latch button on the side and remove your bag.

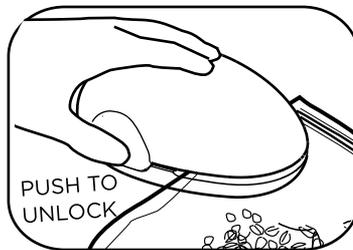

- 6** Voila! You're done. The dime sized heat seal impression around the puncture means the seal is airtight.

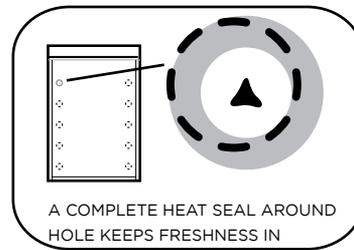

How to re-use a Frisper vac-snap zipper bag

Reusing a Frisper bag is one of the great features of the Frisper system. When re-using bags we always recommend a thorough washing of the inside of the bag between uses. Let the bags air dry upside down and you're good to go.

You can also put them in the dishwasher top rack by opening the zipper and placing them upside down on a glass spindle.


The basics

Frisper bags come in a variety of sizes. Each bag has a series of marks/circles or arrows which indicate prime frising locations along the perimeter of the bag.

Remember, never frisp along the zipper edge.

To begin, we recommend starting with a circle at the bottom of the bag. As you reopen and reseal the bag, move upwards towards the zipper. This will ensure always getting max volume out of the bag.


1

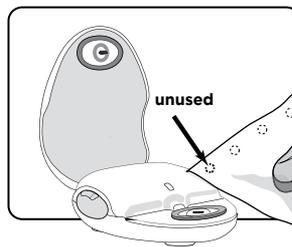

USE AN INDICATOR CIRCLE

The first time you use a bag, we recommend starting with a circle at the bottom of the bag.


2

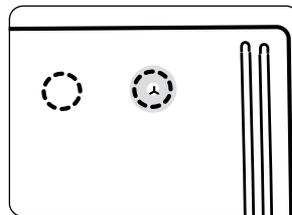

LINE UP

After vacuum sealing, the bag will be melted around the indicator circle, creating an airtight seal.

3

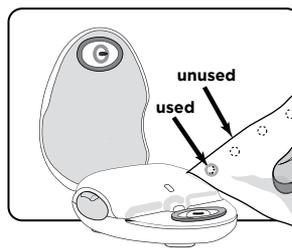

USE A NEW INDICATOR CIRCLE

To vacuum seal a bag again, use a different indicator circle.


NOTE: DO NOT REUSE INDICATOR CIRCLES OR OVERLAP HEAT SEALS

Goof proof sealing – how to save an incomplete seal


Every once in a while, you might not totally seal the zipper or press too lightly on the lid when you start the Frisper. What happens next is that no air comes out of the bag and the Frisper keeps running and running. That's because it's trying to evacuate air, but the bag is still open somewhere...so here's what to do to remedy this situation.

1 Open the zipper and make sure it's clean of any fats or oils. Use a paper towel to wipe it clean.


2 Using your zip disc - hook, flip and zip – seal the zipper closed.

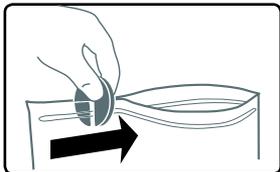


3 Lay the bag flat and center the indicator circle you just attempted to seal directly over the orange sealing ring. Make sure you align it precisely so the puncture tooth will re-enter the hole at the same exact point.

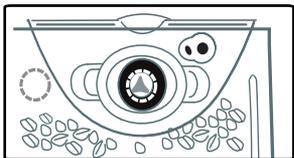

4 Now firmly press the lid down on the bag, double checking the alignment.

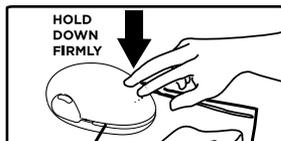

5 Release the lid and vacuuming should already be underway.

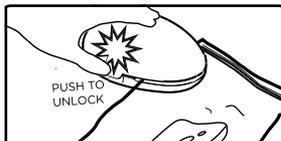


6 In less than 30 seconds the vacuum and seal should be completed.

You're done! Heat seal is now complete and airtight.

This should remedy the incomplete seal and your bag is ready and re-usable.

If for some reason, this remedy doesn't work, please call our Frisper concierge line and we'll help you via phone. We're open 7 am - 7 pm Pacific Standard Time.

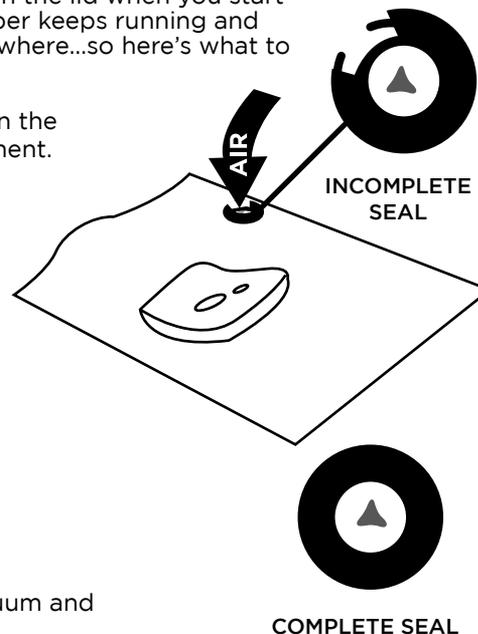


Care and maintenance


The Frisper is an electrical appliance. Never rinse or submerge the product in water. Certain plastic removable parts can be rinsed, washed in warm soapy water or are top rack dishwasher safe — top rack only!

The drip tray which catches liquid run off is constructed of anti-bacterial material. However, it still should be regularly cleaned after friscing moist food. It is removable and can be washed with warm soapy water or placed carefully in the top rack of your dishwasher.


- 1** Use the release tab to detach the catch tray.

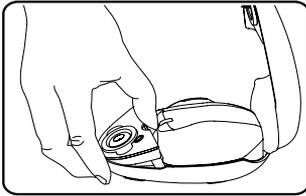

- 2** Remove the tray cover.

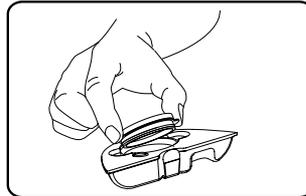

- 3** Pour out liquids. Wash with soap or place in the dishwasher.

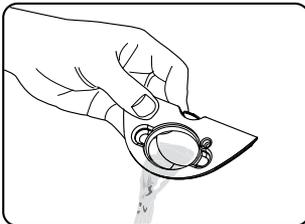


Be sure to clean the flexi tube promptly if food or liquids get into the tube.

Storing Your Frisper

Always unplug the Frisper when not in use.

Frisper is small enough to stay on your counter. It can also be stored in a cabinet or drawer.

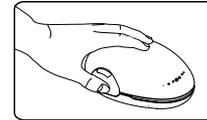

PRESS THE BUTTON TO UNLOCK THE LID BEFORE STORING YOUR FRISPER. THIS HELPS KEEP THE OVAL RING FROM DEFORMING.

It is best to store your Frisper with the lid unlocked. This allows the oval rings to retain their original shape and size.

It is best to store the flexi tube hose in a loose knot (like a pretzel) to avoid pinching or deforming the hose. Remember this hose is for use with canisters, upright pantry bags, bottle stoppers, and mason jar lid sealers. It is designed for a universal fit and works with many brands of vacuum accessories. For a complete list, please phone the Frisper Concierge.

Common questions and quick tips

Does it matter which side of the bag is facing up when I am frisping?

No, it doesn't matter. Just make sure that the zipper edge is facing away from the center of the Frisper – i.e. facing left or right of the lid.

What do the lights mean on the release latch button of the Frisper?

There are 3 series of light indicating functions.

- Solid green – the product is plugged in and powered.
- Solid orange – the vacuum sealing process is underway.
- Flashing green – the process is finished.

What can I Frisp?

You can frisp a variety of foods and items. Soups, liquids and sauces must be par frozen first. Check the Frisping Shopping List for great recommendations and ideas.

Can I microwave or simmer food in a Frisper bag?

Yes. Frisper bags are perfectly fine for a one-time use in the microwave or stove top simmering. They are NOT for boiling.

Where can I find help?

You can speak live with a Frisper concierge agent between the hours of 7 am and 7 pm Pacific Standard Time.
Email us at customerservice@frisper.com

Check out product info at www.oliso.com/frisper

Check out “how-to problem solving” videos we’ve created at www.oliso.com/frisper and click on video coaching.

Quick Tips you'll find helpful

- Use the indicator circles pre-printed on the vac-snap zipper bag to ensure correct positioning every time.
- To begin, we recommend starting with a circle at the bottom of the bag. As you reopen and reseal the bag, move upwards towards the zipper. This will ensure always getting max volume out of the bag.
- Place the bag edge directly against the long edge of the drip tray. Make sure it's lined up correctly but don't force the bag to bunch up under the lid.
- Keep the vac-snap zipper bag flat and smooth and shake it first so food is on the side opposite of the one you are frisping. Don't bunch up the bag under the lid.
- Don't frisp directly over previously used seals. Don't overlap seals either. It won't work, and you'll be frustrated. Frisp a clean, clear seal each time.
- Don't frisp over the zipper edge Doing so will completely defeat the purpose of the machine and you'll be frustrated. Just frisp using the pre-printed indicator circles as a guide.

Troubleshooting

Problem: The Frisper sounds like it is working but..... nothing is happening.

Are you trying to Frisp from a used spot on the bag?

- Open the Frisper and move the bag to a fresh spot to frisp.

Are you overlapping or too close to a used spot?

- If so, move the bag away from the used spot by 1/4-inch and try again.

Is the vac-snap zipper fully closed?

- Re-zip again using the zip-disc.

Are the foods in the bag fatty or juicy?

- With a clean dry paper towel, wipe down the zipper treads on the inside of the bag.

Is food bunched up and under the Frisper lid?

- Remove bag from Frisper, shake food to opposite side and re-frisp the circle you have already started. Make sure you line the puncture tooth up and directly over the puncture you just made.

Is the drip tray full?

- Empty, rinse out and thoroughly dry.

Is the heat-sealed circle complete and is the thickness of the seal even? and through?

- Visually review the heat seal impression left on the bag. If the seal is not even and through, line up the puncture tooth over the hole it made and re-frisp.

Is the flexi tube plugged into the Frisper's flexi tube valve port?

- Remove flexi tube and re-frisp.

Did you firmly press down on the lid? or just tap it?

- Open lid, make sure puncture tooth is aligned. Press firmly down on the lid and let go.

Is the vac-snap zipper bag edge lined up along the drip tray marking line? Is the vac-snap zipper bag overlapping the inside of the Frisper and bunched up under the lid?

- Open the lid, move the bag edge to run parallel to the drip tray edge with the zipper facing right or left.

Problem: Frisper is not working and there is no sound when I press down on the lid.

Is the electrical cord plugged into a 120 V AC outlet?

- Plug the Frisper into a wall outlet.

Is the terminal connector of the adaptor plugged into the Frisper?

- Plug adaptor into the rear terminal of the Frisper.

Is the correct AC adaptor used?

- Check the adaptor to make sure it's the Frisper's.

Is the LED indicator light off?

- Check the above 2 steps

Is the lid closed down firmly?

- You will hear a 'click.'

Problem: Bag and food are wet.

- Always par freeze liquids first before friscing.
- Pat meats or vegetables dry before friscing. Use a paper towel as a blotter inside the vac-snap zipper bag – it becomes a wick and helps to seal moist foods.

Problem: Bag is leaking air.

Is the heat sealed circle complete? Is there a tiny puncture somewhere on the vac-snap zipper bag?

- Visually inspect the vac-snap bag. Check the heat seal impression left on the bag.
- Re-frisp if necessary.

Is the zipper closed completely?


- Re-zip again using the zip-disc.

Are you using a Frisper vac-snap zipper bag?

- Zipper bags from the grocery store aren't made strongly enough, and air passes through them.


Simple steps to using frisper accessories

This hose lets you frisp canisters, jars, bottles and other accessories.

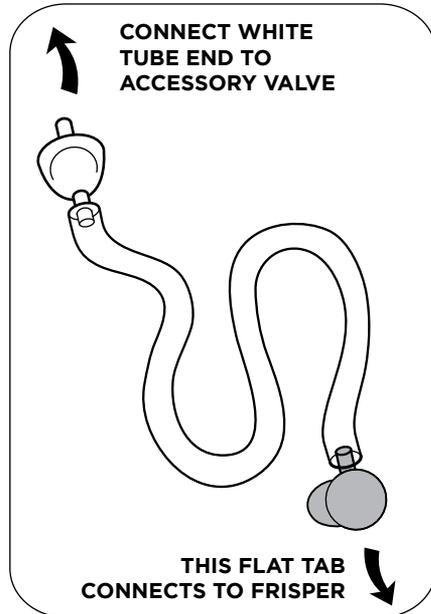


NOTE: Disconnect flexi tube by twisting the flat tabbed end counterclockwise. You must disconnect the flexi tube before using Frisper with vac-snap zipper bags.


- 1** Connect white tube end to accessory valve.

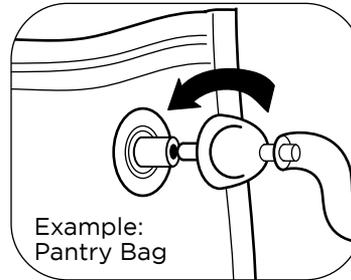


- 2** Connect flat tabbed end to flexi tube valve port, exactly as shown.

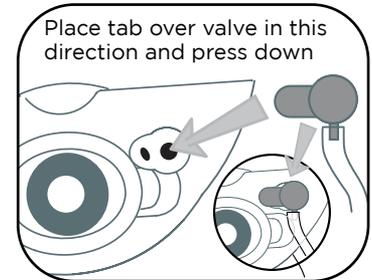

- 3** Click Frisper shut and vacuum will start.

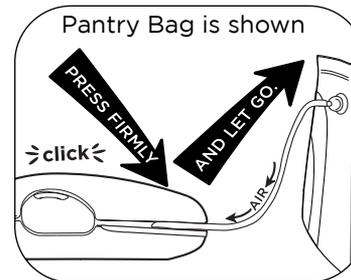

- 4** When Frisper stops and green light flashes, push button to unlock

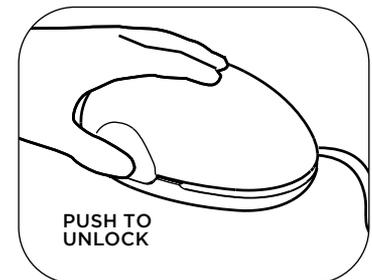

Thanks for shopping Oliso!

Visit <http://www.prodregister.com/oliso/>

to register your Frisper

One (1) Year Limited Warranty

Oliso, Inc. warrants that for a period of one year from the date of the original purchase, this product will be free from defects in material and workmanship, when utilized for normal household use. Oliso, Inc. will repair or replace this product or any component of the product found to be defective during the warranty period without charge to the customer. If a replacement product is sent, it will carry the remaining warranty of the original product. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Oliso, Inc. dealers or retail stores selling Oliso, Inc. products do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

The liability of Oliso, Inc. is limited solely to the cost of repair or replacement of the product at its option. This warranty does not cover normal wear of parts and does not apply to any product that has been tampered with or used for commercial purposes. This warranty does not cover damage caused by misuse, abuse, use on improper voltage or current, use contrary to the operating instructions, negligent handling or damage due to faulty packaging or mishandling in transit. This warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alteration to the product or any of its parts, which have been performed by a repair person not authorized by Oliso, Inc. Further, the warranty does not cover Acts of God such as fire, flood, hurricanes, and tornados.

This warranty is extended to the original purchaser of the product and excludes all other legal and/or conventional warranties. The responsibility of Oliso, Inc. is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. In no event shall Oliso, Inc. be liable for any incidental or consequential damages caused by breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by law, any implied warranty or condition of merchantability or fitness for a particular purchase is limited in duration to the duration of the above warranty. Oliso, Inc. disclaims all other warranties, conditions, or representations, express, implied, statutory or otherwise. In no event shall Oliso, Inc. be liable for any indirect, special, incidental or consequential losses or damages (including but not limited to interruption of business or loss of business or profit) resulting from the use of or inability to use the product, any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party. Some states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

If you have any question regarding this warranty or would like to obtain warranty service, please email Oliso, Inc. at customerservice@frisper.com, and a service center address will be provided to you. If you have further questions, you may call 1-800-481-7978.

© 2009 Oliso, Inc. All rights reserved. Frisper and Oliso are registered trademarks of Oliso Inc. Frisp, Freshkeeper, and Vac-Snap are trademarks of Oliso Inc.

Patent Pending. Item no. 59001266 <8/09B> Printed in China.